




THERMO-FINISHER™

Food Finisher

TF-1900 & TF-4600 Series

Installation & Operating Manual

I & W #07.05.117.00

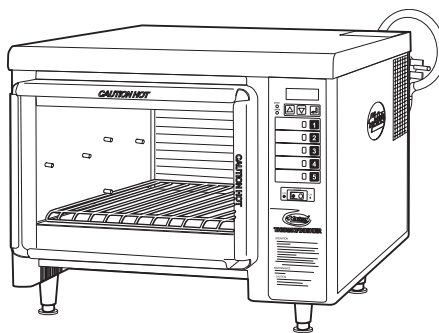

This manual contains important safety information concerning the maintenance, use and operation of this product. Failure to follow the instructions contained in this manual may result in serious injury. If you are unable to understand the contents of this manual, please bring it to the attention of your supervisor. Do not operate this equipment unless you have read and understood the contents of this manual.

Este manual contiene importante información sobre seguridad concerniente al mantenimiento, uso y operación de este producto. Cualquier falla en el seguimiento de las instrucciones contenidas en este manual puede resultar en un serio daño. Si usted no puede entender el contenido de este manual por favor pregunte a su supervisor. No opere este equipo al menos que haya leído y comprendido el contenido de este manual.

CONTENTS

Important Owner Information	i	Programming The Unit	7
Introduction	i	General	7
Important Safety Instructions	1	Programming Controller	8
Model Descriptions	2	Programming a Selection	8
All Models	2	Idle Mode	10
TF-1919	2	Auto-Off Mode	10
TF-4619	2	Programming Hints	10
TF-461R	2	Operation	12
TFW-461R	2	Basic Food Finishing	12
Specifications	3	Food Finishing Hints	12
Electrical Rating Chart	3	Maintenance	13
Plug Configurations	3	General	13
Dimensions	4	Cleaning-Exterior	13
Installation	5	Blower Motors	13
Unpacking	5	Cleaning-Interior	13
Location	5	Recommended Food Finishing Guide	14
Electrical Connections (TFW-461R)	6	Hatco Limited Warranty	17
Appliance Legs (TFW-461R)	6	Authorized Parts Distributors	Back Cover

IMPORTANT OWNER INFORMATION

Record the model number, serial number (identification decal located on the back or side of the unit), voltage and purchase date of your Thermo-Finisher™ Food Finisher in the spaces below. Please have this information available when calling Hatco for service assistance.

Model No. _____

Serial No. _____

Voltage _____

Date of Purchase _____

Business Hours: 8:00 a.m. to 5:00 p.m.
Central Standard Time

(Summer Hours: June to September –
8:00 a.m. to 5:00 p.m. C.D.T.
Monday through Thursday
8:00 a.m. to 2:30 p.m. C.D.T. Friday)

Telephone: (800) 558-0607; (414) 671-6350

Fax: (800) 690-2966 (Parts & Service)
(414) 671-3976 (International)



 

 
24-Hour 7-Day Parts & Service
Assistance available in the
United States and Canada by
calling (800) 558-0607.

Additional information can be found by visiting our
web site at **www.hatcocorp.com**.

INTRODUCTION

The Hatco Thermo-Finisher is designed to rapidly heat or thermalize a wide range of food products which allows operators to serve customers faster, thereby improving customer satisfaction. The Thermo-Finisher is perfect for melting toppings or finishing soup and foods like Mexican entrees, nachos and potato skins. It also thermalizes frozen foods such as appetizers, french fries and pizza. Thermo-Finisher can also be used to heat plates prior to serving.

This manual provides the installation, safety and operating instructions for the Thermo-Finisher Food Finisher. We recommend all installation, operating and safety instructions appearing in this manual be read prior to installation or operation of your Hatco















Food Finisher. Safety instructions that appear in this manual after a warning symbol  and the words **WARNING** or **CAUTION** printed in bold face are very important.  **WARNING** means there is the possibility of serious personal injury or death to yourself or others.  **CAUTION** means there is the possibility of minor or moderate injury. **CAUTION without the symbol** signifies the possibility of equipment or property damage only.

Your Hatco Thermo-Finisher Food Finisher is a product of extensive research and field testing. The materials used were selected for maximum durability, attractive appearance and optimum performance. Every unit is thoroughly inspected and tested prior to shipment.







IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT! Read the following important safety instructions to avoid personal injury or death, and to avoid damage to the equipment or property.

WARNINGS

-  Plug unit into a properly grounded electrical outlet of the correct voltage, size and plug configuration. If the plug and receptacle do not match, contact a qualified electrician to determine the proper voltage and size and install the proper electrical outlet.
-  To avoid any injury or damage to the unit do not pull unit by power cord.
-  To prevent any injury, discontinue use if power cord is frayed or worn.
-  To prevent injury or damage to the unit, TFW-461R model must be installed by a qualified electrician.
-  For safe and proper operation, the unit must be located a reasonable distance from combustible walls and materials. If safe distances are not maintained, discoloration or combustion could occur. Do not locate unit under shelving or closer than 12" (305 mm) from the ceiling.
-  On TF-1919, TF-4619 and TF-461R models allow a minimum of 1" (25 mm) clearance along the sides and back. Allow a clearance of 26" (660 mm) along the front discharge to ensure proper operation and safety.
-  On TFW-461R models allow a minimum of 1" (25 mm) clearance along the right wall and back wall when facing controls. Allow 3" (76 mm) along the left wall. Allow a clearance of 26" (660 mm) along the front discharge to ensure proper operation and safety.
-  To reduce the risk of fire, the TFW-461R appliance is to be mounted on floors of noncombustible flooring and surface finish with no combustible material against the underside, or on noncombustible slabs or arches, have no combustible material against the underside. Such construction shall in all cases extend not less than 12" (305 mm) beyond the equipment on all sides.
-  To avoid any injury, turn the power switch OFF, unplug the unit from the power source and allow to cool before performing any maintenance.
-  Unit is not waterproof. DO NOT submerge in water. Do not operate if it has been submerged in water. Do not steam clean the interior or flood with water or liquid solution.
-  To avoid electrical shock or personal injury, do not steam clean or use excessive water on the unit.
-  If service is required on this unit, contact your Authorized Hatco Service Agent, or contact the Hatco Service Department at 800-558-0607 or 414-671-6350; fax 800-690-2966 or International fax 414-671-3976.
-  This product has no "user" serviceable parts. To avoid damage to the unit or injury to personnel, use only Authorized Hatco Service Agents and Genuine Hatco Replacement Parts when service is required.
-  Genuine Hatco Replacement Parts are specified to operate safely in the environments in which they are used. Some aftermarket or generic replacement parts do not have the characteristics that will allow them to operate safely in Hatco equipment. It is essential to use Hatco Replacement Parts when repairing Hatco equipment. Failure to use Hatco Replacement Parts may subject operators of the equipment to hazardous electrical voltage, resulting in electrical shock or burn.

CAUTIONS

-  Some exterior surfaces on the unit will get hot. Use caution when touching these areas to avoid injury.
-  Unit is not weatherproof. For safe and proper operation locate the unit indoors where the ambient air temperature is a minimum of 70°F (21°C).
-  To avoid any injury or damage to the unit do not operate appliance without installation of supplied legs.
-  DO NOT use "Pyrex" glass plates or serving pieces in the finisher. "Pyrex" glass may break causing personal injury and/or food contamination.
-  DO NOT use paper or plastic serving pieces in the finisher. These materials may melt or burn causing a fire hazard and/or food contamination and may damage the unit.
-  Plate/ tray will be very hot upon removal; use oven mitt, protective clothing, or pan gripper to remove.

IMPORTANT SAFETY INSTRUCTIONS

⚠ CAUTIONS

- ⚠ Do not remove the glass from the unit for cleaning purposes. Doing so may cause injury or damage to the unit.
- ⚠ To avoid any injury or damage locate the unit at the proper counter height, in an area that is convenient for use. The location should be level to prevent the unit or its contents from accidentally falling, and strong enough to support the weight of the unit.
- ⚠ Do not place anything on top of the unit; doing so could damage the unit or subject personnel to possible injury.
- ⚠ To avoid any injury or damage to the unit make sure the plate rack is not in direct contact with the glass base.

- ⚠ The National Sanitation Foundation (NSF) requires TFW-461R units to be either sealed or raised on the installation surface. If this unit cannot be sealed at the point of use, 4" (102 mm) legs are included to allow for proper cleaning access below unit.

CAUTIONS

Do not place any objects on the metal rack during preheat. Doing so will most likely over-cook the product.

Use only non-abrasive cleaners. Abrasive cleaners could scratch the finish of your Thermo-Finisher, marring its appearance and making it susceptible to dirt accumulation.

MODEL DESCRIPTIONS

ALL MODELS

The Thermo-Finisher Food Finisher models have an easy-to-clean interior, constructed of stainless steel and heavy duty glass. The units feature quick-heating infrared ribbon elements with a microprocessor to control the radiant heat and heating time. All models come with a user friendly control panel which accepts up to five preprogrammed recipe times. All models accommodate a half-size sheet pan. A plate rack is included.

MODEL TF-1919

The TF-1919 model features one upper element to heat the food product on the plate and one lower element to heat the center of the plate. Loading and unloading of food is done on the control side of the unit. An attached cord and plug set is included.

MODEL TF-4619

The TF-4619 model features four upper elements that heat food product on the plate and one lower element that heats the center of the plate. Loading and unloading of food is done on the control side of the unit. An attached cord and plug set is included.

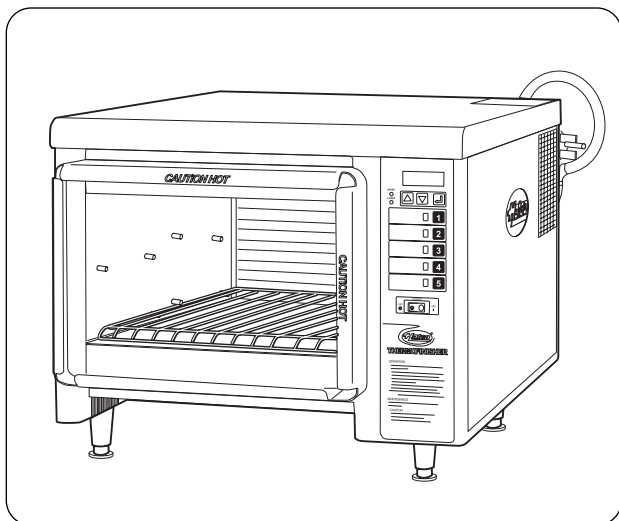


Figure 1. Thermo-Finisher – Model TF-4619

MODEL TF-461R

The TF-461R features four upper circular elements and one lower rectangular element for even heat distribution from corner to corner. Loading and unloading of food is done on the control side of the unit. An attached cord and plug set is included.

MODEL TFW-461R

The TFW-461R features four upper circular elements and one lower rectangular element for even heat distribution from corner to corner. Loading and unloading of food is done on the control side of the unit. This model must be electrically hard wire connected by a qualified electrician.

SPECIFICATIONS

ELECTRICAL RATING CHART

Model	Voltage	Watts	Amps	Phase	Plug Configuration	Shipping Weight
TF-1919	208	4800	23.1	1	NEMA 6-30P	88 lbs. (40 kg)
	240	5000	20.8	1	NEMA 6-30P	88 lbs. (40 kg)
	220	4201	19.1	1	NONE†	88 lbs. (40 kg)
	240	5000	20.8	1	NONE†	88 lbs. (40 kg)
	380 (CE)	4513	11.9	1	NONE†	88 lbs. (40 kg)
TF-4619	208	7200	20.1	3	NEMA L15-30P	90 lbs. (41 kg)
	240	7300	17.6	3	NEMA L15-30P	90 lbs. (41 kg)
	220	6134	16.1	3	NONE†	90 lbs. (41 kg)
	240	7300	17.6	3	NONE†	90 lbs. (41 kg)
	380 (CE)	6588	10.1	3	NONE†	90 lbs. (41 kg)
TF-461R	208	6250	30.0	1	NEMA 6-50P	93 lbs. (42 kg)
	208	6250	19.0	3	NEMA L15-30P	93 lbs. (42 kg)
	240	8320	34.7	1	NEMA 6-50P	93 lbs. (42 kg)
	240	8320	21.9	3	NEMA L15-30P	93 lbs. (42 kg)
	220	6992	20.1	3	NONE†	93 lbs. (42 kg)
Model	Voltage	Watts	Amps	Phase	Circuit Breaker Size*	Shipping Weight
TFW-461R	208	6250	30.0	1	40	93 lbs. (42 kg)
	208	6250	19.0	3	30	93 lbs. (42 kg)
	240	8320	34.7	1	50	93 lbs. (42 kg)
	240	8320	21.9	3	30	93 lbs. (42 kg)
	220	6992	20.1	3	30	93 lbs. (42 kg)

The electrical information in the shaded areas pertains to **Export models only**.

† Power cord is attached without a plug.

**NOTE: Model TFW-461R must be properly hard wire connected by a qualified electrician. This model cannot be used with a cord and plug.*

PLUG CONFIGURATIONS

Units are supplied from the factory with an electrical cord and plug on the back of the unit. (See Figure 2.)

⚠ WARNING

Plug unit into a properly grounded electrical outlet of the correct voltage, size and plug configuration. If the plug and receptacle do not match, contact a qualified electrician to determine the proper voltage and size and install the proper electrical outlet.

⚠ WARNING

To prevent injury or damage to the unit, TFW-461R model must be installed by a qualified electrician.

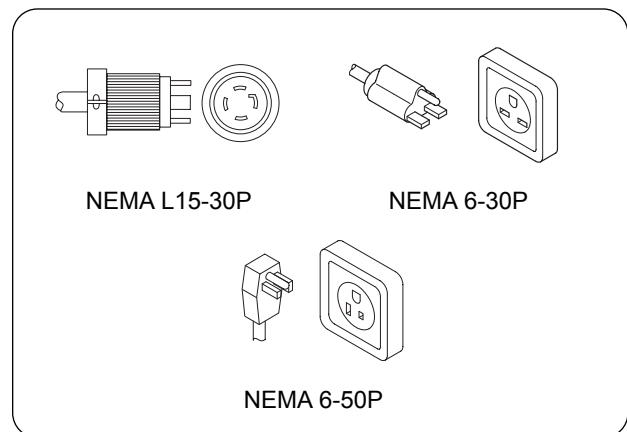


Figure 2. Plug Configurations

SPECIFICATIONS

DIMENSIONS

EXTERIOR DIMENSIONS

Model	(A) Width	(B) Depth*	(C) Height
TF-1919	20-1/4" (514 mm)	27-1/2"* (699 mm)	17" (432 mm)
TF-4619	20-1/4" (514 mm)	27-1/2"* (699 mm)	17" (432 mm)
TF-461R 1 Phase Units	23-1/8" (587 mm)	30-7/8" (784 mm)	17" (432 mm)
TF-461R 3 Phase Units	22-1/8" (562 mm)	30-7/8" (784 mm)	17" (432 mm)
TFW-461R	25-1/2" (648 mm)	20-7/8" (530 mm)	18-1/2" ♦ (470 mm)

EFFECTIVE FINISHING AREA

Model	(D) Width	(E) Depth	(F) Height
TF-1919	13" (330 mm)	18" (457 mm)	6-3/8" (162 mm)
TF-4619	13" (330 mm)	18" (457 mm)	6-3/8" (162 mm)
TF-461R	13" (330 mm)	18" (457 mm)	6-3/8" (162 mm)
TFW-461R	18" (457 mm)	13" (330 mm)	6-3/8" (162 mm)

*Allow an additional 2" (51 mm) minimum for power cord.

♦ Height of unit is 14-5/8" (159 mm) without legs attached.

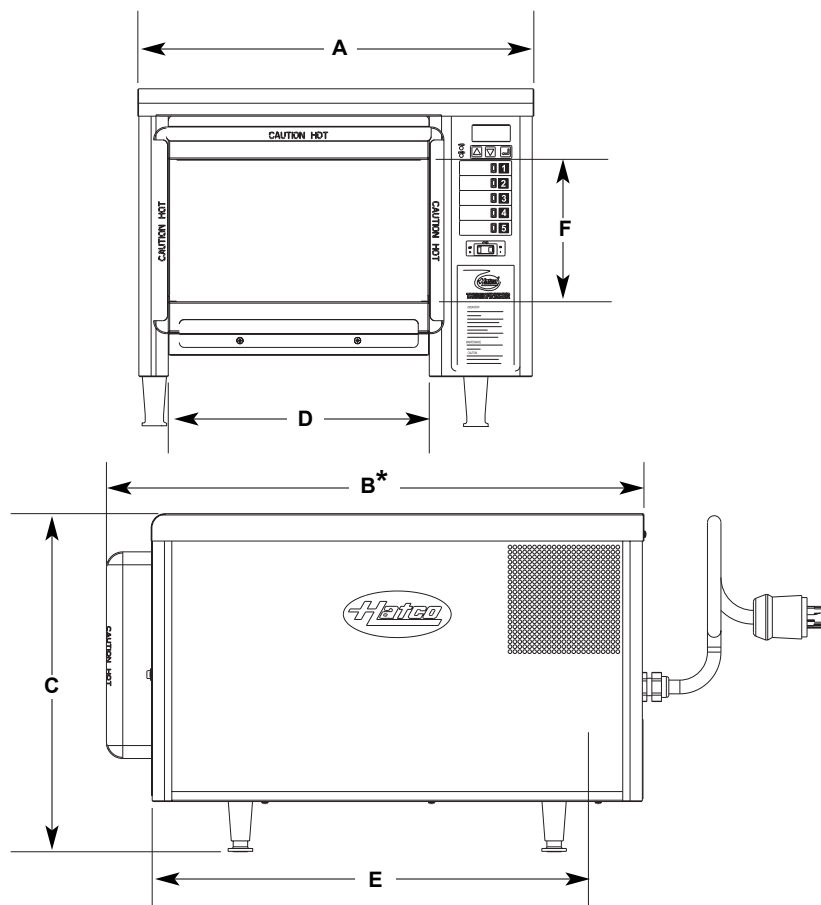


Figure 3. Dimensions

UNPACKING

1. Remove unit from box.
2. Remove information packet. **To prevent delay in obtaining warranty coverage, fill out and mail in warranty card to Hatco.**
3. Remove tape, glass protection corners and packaging material from all surfaces of unit.
4. The unit is equipped with both a top set and bottom set of pins for supporting the wire plate rack. Properly position the wire plate rack using either set, making sure the wire rack is placed between the three lower pins and the upper pin on each side. (See Figure 4).

NOTE: Top wire plate position is recommended for quick flash heating only. All items listed in the Food Finishing Guide are utilizing the bottom set of pins for supporting the wire plate rack.

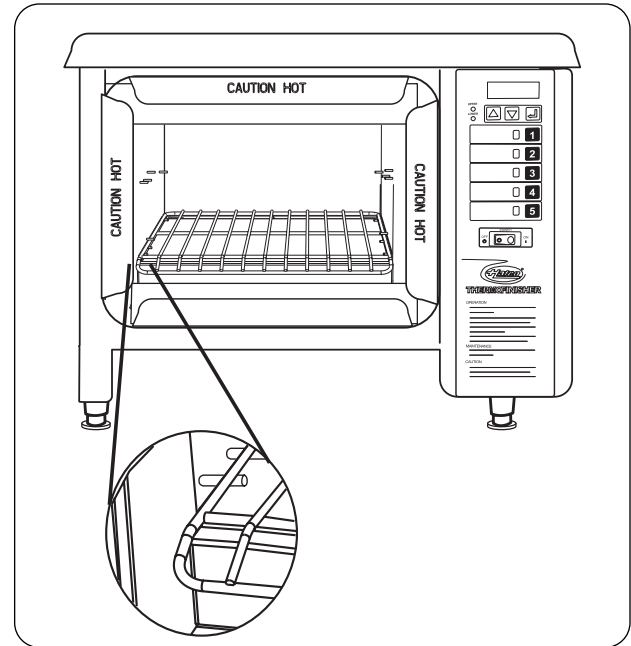


Figure 4. Rack Support Placement

LOCATION

⚠ WARNING

To reduce the risk of fire, the TFW-461R appliance is to be mounted on floors of noncombustible flooring and surface finish with no combustible material against the underside, or on noncombustible slabs or arches, have no combustible material against the underside. Such construction shall in all cases extend not less than 12" (305 mm) beyond the equipment on all sides.

⚠ WARNING

For safe and proper operation, the unit must be located a reasonable distance from combustible walls and materials. If safe distances are not maintained, discoloration or combustion could occur. Do not locate unit under shelving or closer than 12" (305 mm) from the ceiling.

⚠ WARNING

On TF-1919, TF-4619 and TF-461R models allow a minimum of 1" (25 mm) clearance along the sides and back. Allow a clearance of 26" (660 mm) along the front discharge to ensure proper operation and safety.

⚠ WARNING

To avoid any injury or damage to the unit do not pull unit by power cord.

⚠ WARNING

To prevent any injury, discontinue use if power cord is frayed or worn.

⚠ WARNING

On TFW-461R models allow a minimum of 1" (25 mm) clearance along the right wall and back wall when facing controls. Allow 3" (76 mm) along the left wall. Allow a clearance of 26" (660 mm) along the front discharge to ensure proper operation and safety.

⚠ CAUTION

To avoid any injury or damage to the unit make sure the plate rack is not in direct contact with the glass base.

⚠ CAUTION

To avoid any injury or damage locate the unit at the proper counter height, in an area that is convenient for use. The location should be level to prevent the unit or its contents from accidentally falling, and strong enough to support the weight of the unit.

⚠ CAUTION

Do not place anything on top of the unit; doing so could damage the unit or subject personnel to possible injury.

INSTALLATION

⚠ CAUTION

Unit is not weatherproof. For safe and proper operation locate the unit indoors where the ambient air temperature is a minimum of 70°F (21°C).

ELECTRICAL CONNECTIONS (TFW-461R)

⚠ WARNING

To prevent injury or damage to the unit, TFW-461R model must be installed by a qualified electrician.

1. Remove wire inspection cover located on the right side of the unit when facing the controls.
2. Locate the terminal block inside the unit.
3. Bring power leads from a properly sized circuit breaker or disconnect switch through the knockout provided on the unit.

NOTE: TFW-461R have two knockout locations, one on the bottom of the unit and one on the back.

4. Use copper wire only. Tighten connections properly to a minimum of 40 inch pounds.
5. A grounding screw is provided near the electrical terminals. An equipment grounding conductor must be properly connected to it.
6. Replace and secure wire inspection cover.

APPLIANCE LEGS (TFW-461R)

The TFW-461R Series unit can be installed with or without the 4" (1016 mm) appliance legs supplied.

If the appliance is used without the legs the unit must be sealed and secured to the countertop.

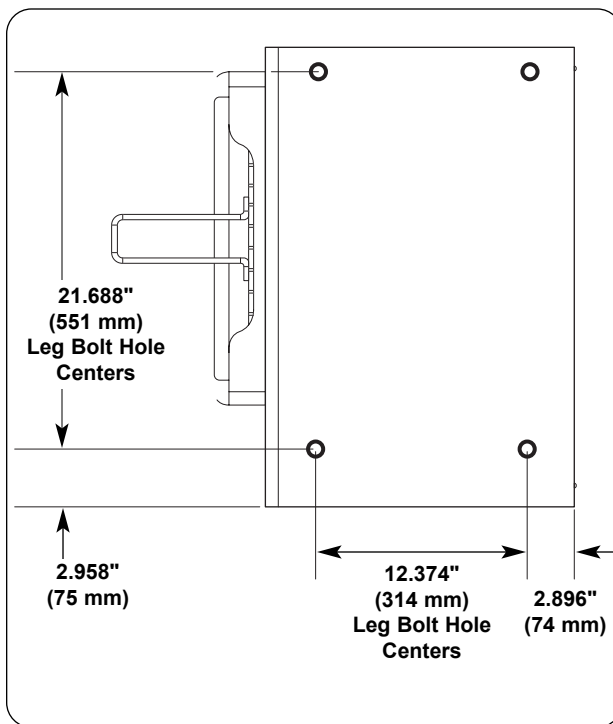


Figure 5. Leg Bolt Hole Centers – TFW-461R

To secure unit to countertop material use four 3/8"-16 bolts placed through the countertop and threaded into the leg bolt holes. See Figure 5 for leg bolt hole centers.

⚠ CAUTION

The National Sanitation Foundation (NSF) requires TFW-461R units to be either sealed or raised on the installation surface. If this unit cannot be sealed at the point of use, 4" (102 mm) legs are included to allow for proper cleaning access below unit.

PROGRAMMING THE UNIT

GENERAL

Thermo-Finisher™ units have both an upper and lower heating zone. The upper elements heat the product on the plate and the lower elements heat the center of the plate.

Five adjustable program button selections allow the operator to fine tune the radiant heat input and heating time for a variety of menu items. This adjustable feature assures optimum serving temperatures without effecting quality.

Thermo-Finisher units also feature an adjustable “Idle” mode and adjustable “Auto-Off” mode, which allow for additional flexibility.

NOTE: After reading and understanding how to program the unit, see PROGRAMMING HINTS and RECOMMENDED FOOD FINISHING GUIDE in this manual for further helpful information.

NOTE: If at anytime during the programming or operation of the unit the display is not reading correctly or the unit is unable to be programmed, turn the unit off. Next, turn the unit back on and restart.

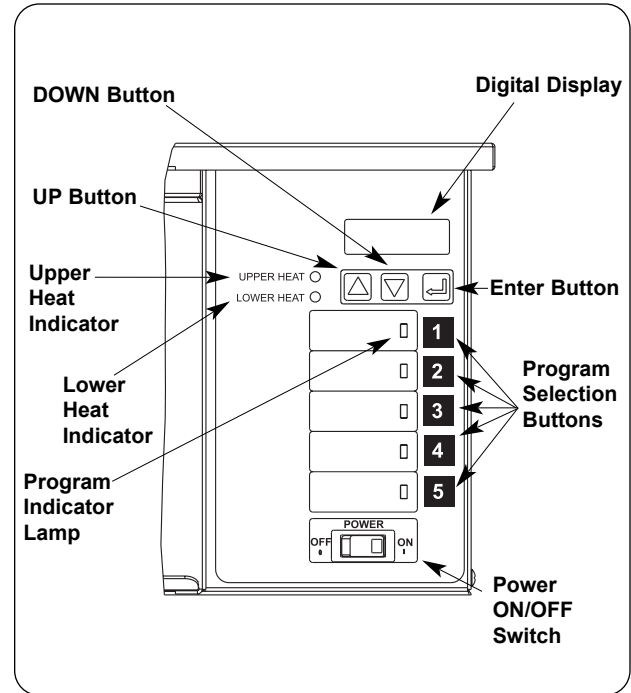


Figure 6. Control Panel

PROGRAMMING CONTROLLER

PROGRAMMING A SELECTION

The following terms are used when programming the unit:

UP = Upper Power Value: Controls the power setting on the upper heating element(s)

UT = Upper Time Value: Controls the time setting on the upper heating element(s)

LP = Lower Power Value: Controls the power setting on the lower heating element(s)

LT = Lower Time Value: Controls the time setting on the lower heating element(s)

 
 


When the unit display shows a Power Value (UP for upper heating zone or LP for lower heating zone) the number indicates the value set at a percentage: example P20 = 20%. These values are adjustable from 5-100% in 5% increments.

 


When the unit display shows a Time Value (UT for upper heating zone or LT for lower heating zone) the number indicates the time in seconds the heating element will be on: example T35 = 35 seconds. These values are adjustable from zero to nine minutes fifty nine seconds.


 

NOTE: The arrow keys are used to enter values when programming the unit. Pressing a key changes the value incrementally. Holding down the key rapidly changes the value.

 

 
1. Plug unit into an electrical outlet of the correct voltage, size and plug configuration. (See *SPECIFICATIONS* for details.)
2. Turn power switch to the "ON" position. The unit will make an audible beep, automatically go into preheat and display will indicate **Stby** (Figure 7A).

After one minute and ten seconds, the preheat cycle is complete the unit will display **rdy** (Figure 7B). The unit is now ready to be programmed.

3. With display showing **rdy**, push and hold the desired Numbered Program Selection button, while at the same time push and hold the Enter  button for **5 seconds** (Figure 7C).
4. **Upper Power Value (UP):** After 3 seconds, the upper heat indicator will glow and the unit will display **PXX** (Figure 7D). Press the UP  or DOWN  arrow key until you reach the desired setting. Values change by 5% every time an arrow key is pressed. Press the ENTER  button when you have reached the desired setting.

5. **Upper Time Value (UT):** The unit will display **t0:00** (Figure 7E). Press the UP  or DOWN  arrow key until you reach the desired setting. Values change by 1 second every time an arrow key is pressed. Holding down an arrow key will cause the numbers to change rapidly. Time can be adjusted from zero to nine minutes fifty nine seconds. Press the ENTER  button when you have reached the desired setting.

6. **Lower Power Value (LP):** The lower heat indicator will glow and the unit will display **PXX** (Figure 7F). Press the UP  or DOWN  arrow key until you reach the desired setting. Values change by 5% every time an arrow key is pressed. Press the ENTER  button when you have reached the desired setting.

7. **Lower Time Value (LT):** The unit will display **t0:00** (Figure 7G). Press the UP  or DOWN  arrow key until you reach the desired setting. Values change by 1 second every time an arrow key is pressed. Press the ENTER  button when you have reached the desired setting.

8. Press the Numbered Program Selection button selected in step 3 to enter all the settings into memory. The display will show **rdy**.

IMPORTANT NOTE: If no adjustments are made within 15 seconds, the controller will revert back to the "READY" mode and will not accept any changes. Also, pressing any of the other Numbered Program Selection buttons will take the unit out of the programming mode without accepting any changes.

9. If ready to finish food, place product in unit on center of metal rack and press desired Numbered Program Selection button.
10. Using a grease pencil or "China" pencil, record the specific menu item on the control panel next to the selected Numbered Program button.
11. Repeat steps 3-10 for the other Program buttons.

NOTE: All units keep the power and timing settings in memory, even when the unit is turned off or is unplugged from the power source.

PROGRAMMING CONTROLLER

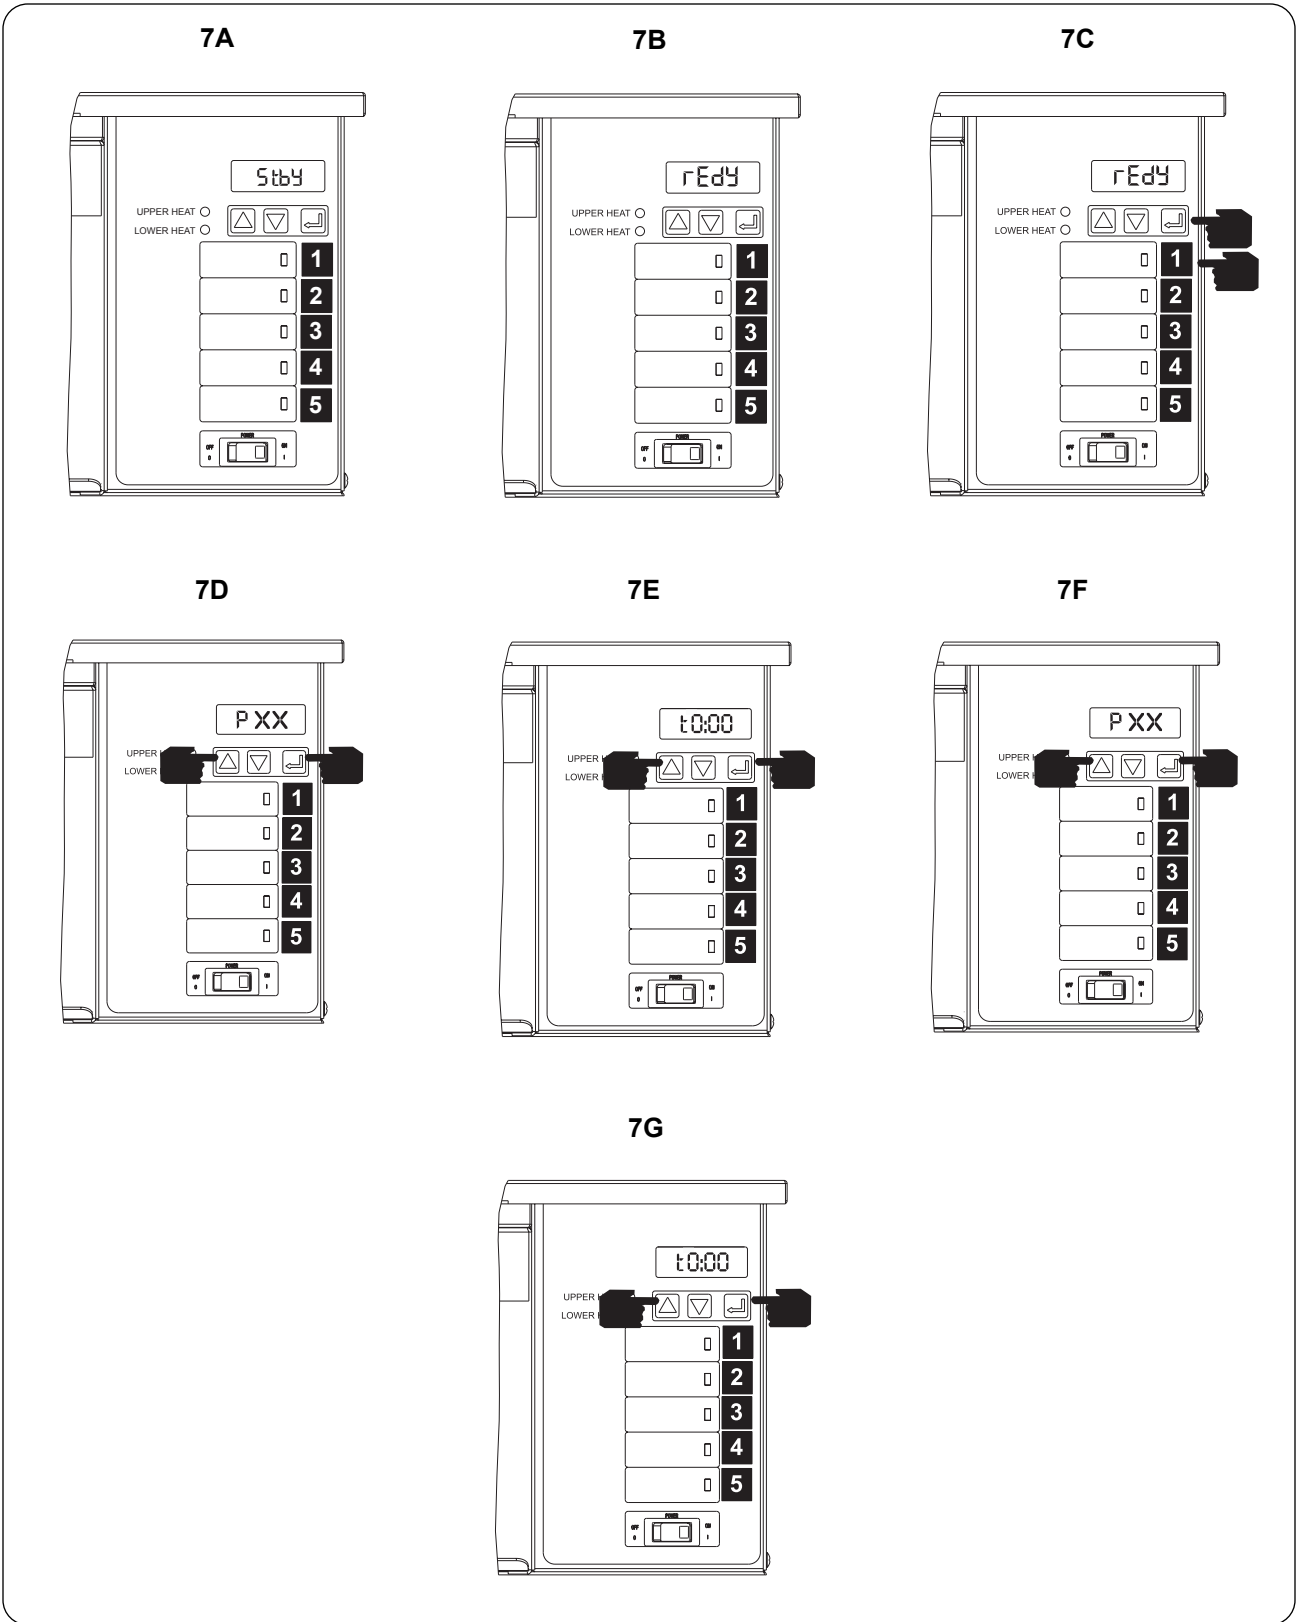


Figure 7. Programming a Selection


 
 
 

PROGRAMMING CONTROLLER

IDLE MODE

The Thermo-Finisher™ features an “Idle” mode. Once the unit reaches the **READY** mode, the upper heating element(s) automatically go into a programmed idle power setting. (The display will still show **READY** during the idle mode). The unit will stay in this mode until one of the five Program buttons is pressed, or the unit goes into auto-shut off.

NOTE: Begin by setting the idle mode power setting at 30% and adjust the program accordingly to achieve optimum performance.

To change the idle mode power setting, follow these steps:

 
 
1. Press and hold the UP  arrow while, at the same time, press and hold the ENTER  button for **three seconds**. The display will show the current programmed power value (Figure 8A).
2. To adjust the idle mode, press either the UP  or DOWN  arrow until you reach the desired setting (Figure 8B). Each time you press an arrow, the setting will change by 10.
3. To accept the new value, push the ENTER  button a second time (Figure 8C).


 

Note: If no adjustments are made within 15 seconds, the controller goes back to its original settings without accepting the change. Pushing any of the numbered program buttons will also take the controller out of programming mode without accepting the change.

AUTO-OFF MODE

The Thermo-Finisher features an Auto-Off mode that turns all the elements off if the unit has not been used for a programmed length of time. This feature can be adjusted from 1 - 60 minutes in one minute increments, or it can be set to never shut off by itself.

To change the Auto-Off mode to a new setting, make sure unit is in “READY” mode and follow these steps:

1. Press and hold the DOWN  arrow while at the same time press and hold the ENTER  button for **three seconds**. The display will show the current programmed Auto-Off value (Figure 9A).

2. To adjust the Auto-Off time push either the UP  or DOWN  arrow until you reach the desired setting (Figure 9B). The Auto-Off mode can be adjusted from “0” (indicating unit will not turn off) to 60 minutes, in single minute increments.
3. To accept the new Auto-Off time value, push the ENTER  button a second time (Figure 9C).

Note: If no adjustments are made within 15 seconds the controller goes back to its original settings without accepting the change. Pressing any of the numbered buttons will also take the controller out of programming mode without accepting the change. To get the unit out of the Auto-Off Mode, push any one of the five numbered program buttons and the unit will begin operating.

PROGRAMMING HINTS:

- On menu items in which internal temperatures are critical (such as chicken or pork), the primary heat source comes from the bottom. On menu items in which the surface temperatures are critical (such as cheese melting), the primary heat source comes from the top. See **RECOMMENDED FOOD FINISHING GUIDE** for specific menu examples.
- When performing product testing, use three plates with the same product and run through the unit in succession. Adjust program accordingly to achieve optimum product temperature.
- When testing a menu item not listed in the *Recommended Food Finishing Guide* start by dividing the conventional cooking time by three and use that number as your cooking time. Set top and bottom heat at 50% and adjust from there. Program setting will vary based on model and food product.

PROGRAMMING CONTROLLER

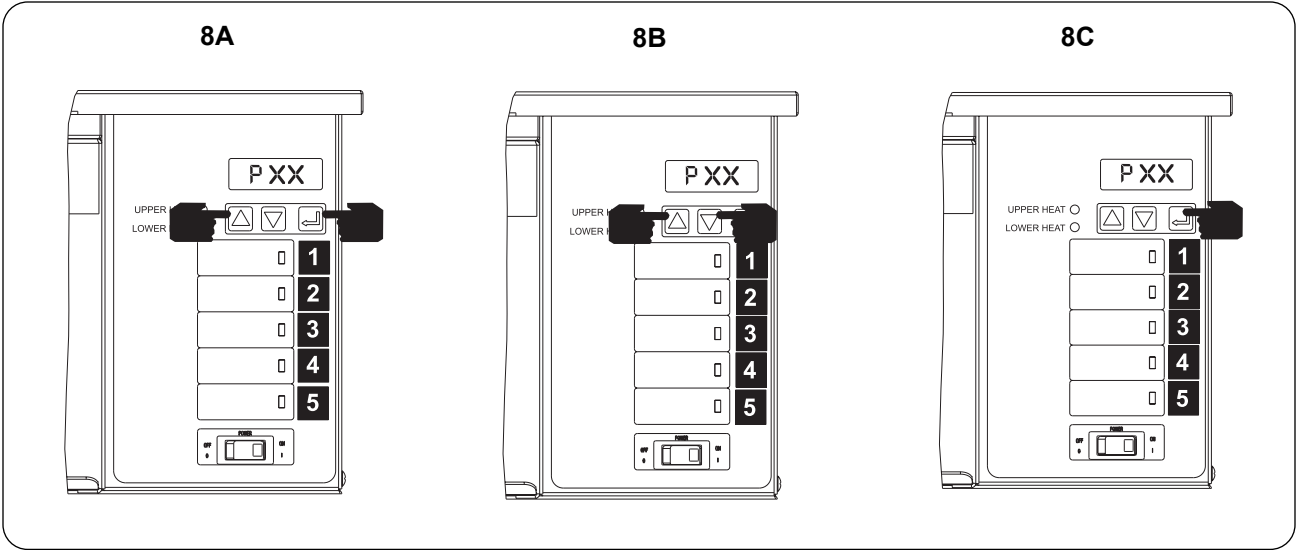


Figure 8. Programming Idle Mode

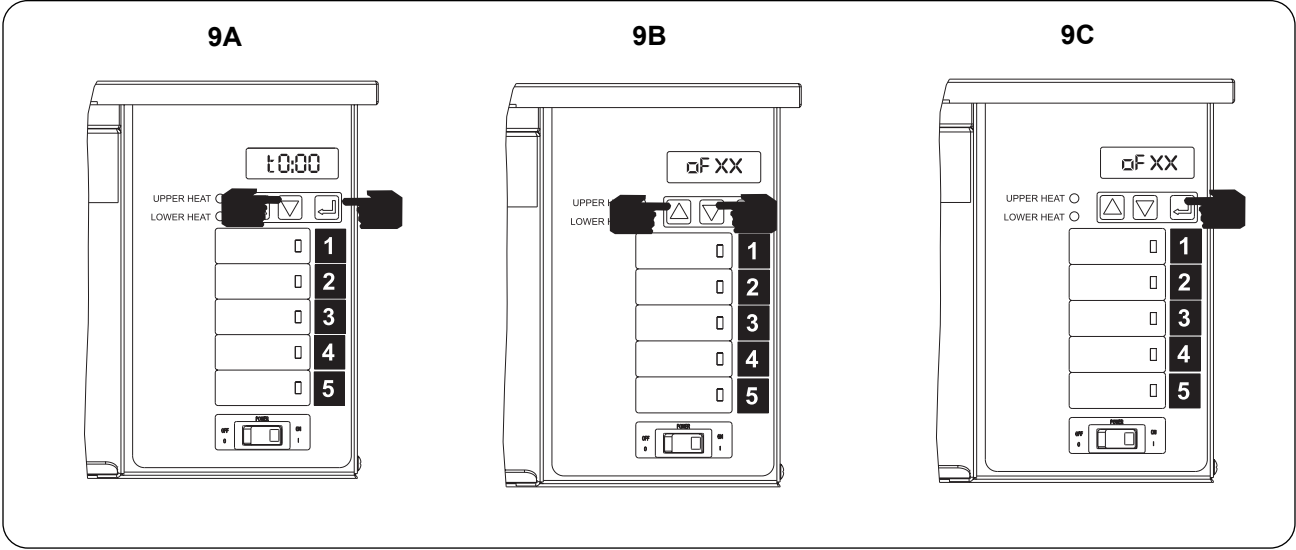


Figure 9. Programming Auto-Off Mode

OPERATION

BASIC FOOD FINISHING

⚠ CAUTION

Some exterior surfaces on the unit will get hot. Use caution when touching these areas to avoid injury.

⚠ CAUTION

DO NOT use “Pyrex” glass plates or serving pieces in the finisher. “Pyrex” glass may break causing personal injury and/or food contamination.

⚠ CAUTION

DO NOT use paper or plastic serving pieces in the finisher. These materials may melt or burn causing a fire hazard and/or food contamination and may damage the unit.

⚠ CAUTION

To avoid any injury or damage to the unit do not operate appliance without installation of supplied legs.

NOTE: See RECOMMENDED FOOD FINISHING GUIDE for specific information.

1. Plug unit into an electrical outlet of the correct voltage, size and plug configuration. See *SPECIFICATIONS* for details.
2. Turn the Power Switch to the “ON” position. (See Figure 10). The unit will make an audible beep, automatically go into “Preheat” and the display will indicate **5:00**. If the unit displays “OFF”, press one of the five product selection keys to put the unit into “Preheat” mode.

CAUTION

Do not place any objects on the metal rack during preheat. Doing so will most likely overcook the product.

3. When the Finisher has reached temperature and is ready for product, the unit will display **READY**. Place plate/tray with food product on the center of the metal rack when unit is in **READY** mode.
4. Select one of five preprogrammed finishing cycles. Unit will beep and the display will begin counting down the programmed finishing time.

Note: If you make an incorrect selection it can be cancelled by selecting any of the buttons on the Control Panel.

5. Finishing is complete when the display flashes **done**, the control panel lights flash and the unit beeps for five seconds. Remove product at this time.

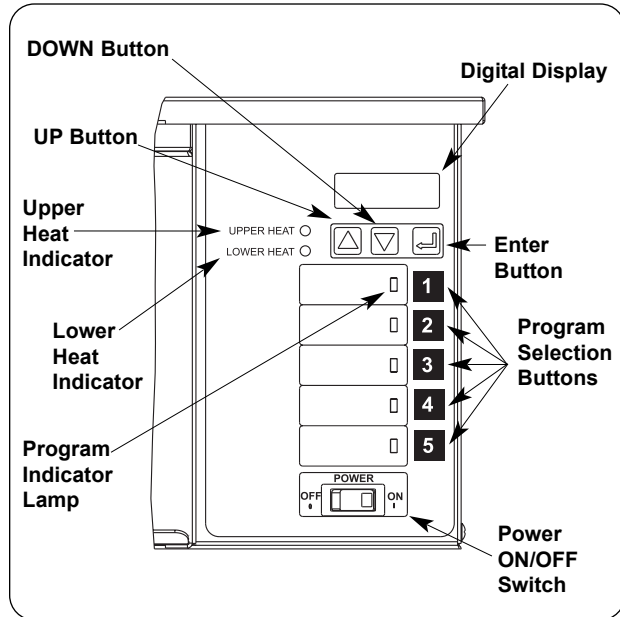


Figure 10. Control Panel

⚠ CAUTION

Plate/tray will be very hot upon removal; use oven mitt, protective clothing, or pan gripper to remove.

Note: The beeping sound can be stopped before the five seconds have elapsed by selecting any of the buttons on the control panel.

6. Another plate/tray with food product can be placed on the rack when Finisher is in the **READY** mode. To heat, repeat steps 3, 4, and 5.

FOOD FINISHING HINTS:

- Most menu items will require the Lower Power Value to be set higher than the Upper Power Value.
- Frozen or refrigerated food product can be heated in the unit. Frozen items do not have to be thawed first.
- Menu items that have completed a food finishing cycle but are not hot enough can be put back in the unit for additional heating.
- When testing a menu item not listed in the *RECOMMENDED FOOD FINISHING GUIDE* start by dividing the conventional cooking time by three and use that number as your cooking time. Set top and bottom heat at 50% and adjust from there. Program setting will vary based on model and food product.

NOTE: See RECOMMENDED FOOD FINISHING GUIDE for specific information.

GENERAL

The Hatco Thermo-Finisher™ warmers are designed for maximum durability and performance with minimum maintenance.

WARNING

To avoid any injury, turn the power switch OFF, unplug the unit from the power source and allow to cool before performing any maintenance.

NOTE: When the unit is HOT the blower fans will remain on even when the power switch is turned off.

CLEANING - EXTERIOR

To preserve the bright finish of the unit, it is recommended that the exterior surfaces be wiped daily with a damp cloth. Stubborn stains may be removed with a good stainless steel cleaner or a non-abrasive cleaner.

CAUTION

Use only non-abrasive cleaners. Abrasive cleaners could scratch the finish of your Thermo-Finisher, marring its appearance and making it susceptible to dirt accumulation.

BLOWER MOTORS

Inspect rear blower motors for food and/or grease build up and clean off if necessary.

CLEANING - INTERIOR

WIRE PLATE RACK

Remove rack from unit and wash with a mild soap and water solution and rinse.

GLASS SURFACES

WARNING

To avoid any injury, turn the power switch OFF, unplug the unit from the power source and allow to cool before performing any maintenance.

Upper and lower glass surfaces can be cleaned after the unit has *cooled for at least one hour.*

With the wire plate rack removed carefully use a “grill scraper” or other small hand held scraper and scrape loose any food debris that has accumulated on the glass.

CAUTION

Do not remove the glass from the unit for cleaning purposes. Doing so may cause injury or damage to the unit.

Remove any stains from the heating surfaces by wiping off the glass using a moist cloth and ceramic cooking top cleaner.

WARNING

Unit is not waterproof. DO NOT submerge in water. Do not operate if it has been submerged in water. Do not steam clean the interior or flood with water or liquid solution.

WARNING

To avoid electrical shock or personal injury, do not steam clean or use excessive water on the unit.

WARNING

If service is required on this unit, contact your Authorized Hatco Service Agent, or contact the Hatco service Department at 800-558-0607 or 414-671-6350; fax 800-690-2966 or International fax 414-671-3976.

WARNING

This product has no “user” serviceable parts. To avoid damage to the unit or injury to personnel, use only Authorized Hatco Service Agents and Genuine Hatco Replacement Parts when service is required.

WARNING

Genuine Hatco Replacement Parts are specified to operate safely in the environments in which they are used. Some aftermarket or generic replacement parts do not have the characteristics that will allow them to operate safely in Hatco equipment. It is essential to use Hatco Replacement Parts when repairing Hatco equipment. Failure to use Hatco Replacement Parts may subject operators of the equipment to hazardous electrical voltage, resulting in electrical shock or burn.

RECOMMENDED FOOD FINISHING GUIDE

Food Item	Upper Power Value (UP)	Upper Time Value (UT)	Lower Power Value (LP)	Lower Time Value (LT)
Biscuits Refrigerated, premade. PAN USED: Half sheet pan, greased lightly.	10	2 minutes 30 seconds	55	4 minutes
Bacon Pork, thick sliced. PAN USED: Half sheet pan, greased lightly.	75	5 minutes	70	5 minutes
Cheese Bread Slacked, topped with 5 cheeses. PAN USED: Hardcoated half sheet pan.	45	4 minutes	30	3 minutes
Cheese Sandwich 1-3 sandwiches at once; assembled, 2 slices of white bread & 2 slices of American cheese each. PAN USED: Hardcoated half sheet pan, 2" (5 cm) deep.	45	1 minute 15 seconds	100	55 seconds
Cheese Sandwich 4 sandwiches at once; assembled, 2 slices of white bread & 2 slices of American cheese each. PAN USED: Hardcoated half sheet pan, 2" (5 cm) deep.	50	1 minute 15 seconds	100	1 minute 23 seconds
Chicken Patty 4 oz., breaded, refrigerated, precooked. PAN USED: hardcoated half sheet pan.	60	4 minutes 30 seconds	40	4 minutes 30 seconds
Chicken Skewers Filleted and marinated. PAN USED: Hatco skewer holder.	85	5 minutes	80	4 minutes 45 seconds
Chicken Wings Buffalo style, slacked, fully cooked, sauce coated. PAN USED: Half sheet pan.	70	5 minutes	60	4 minutes 30 seconds

NOTE: All food items listed are utilizing the bottom set of pins for supporting the wire plate rack.

RECOMMENDED FOOD FINISHING GUIDE

Food Item	Upper Power Value (UP)	Upper Time Value (UT)	Lower Power Value (LP)	Lower Time Value (LT)
Egg Rolls Refrigerated, chicken & pork. PAN USED: Half sheet pan.	35	4 minutes 45 seconds	35	4 minutes
French Fries Frozen, fast-food oven bake style. PAN USED: Half sheet pan.	90	3 minutes	80	3 minutes
French Onion Soup Soup already hot, for melting cheese. PAN USED: Standard soup crock placed on a half sheet pan.	95	35 seconds	5	0 minutes
Hamburgers Pre-cooked, quarter pound patty. PAN USED: Half sheet pan.	70	2 minutes 15 seconds	75	2 minutes
Mozzarella Sticks Breaded, refrigerated. PAN USED: Half sheet pan.	40	5 minutes	50	5 minutes
Nachos Corn chips topped with shredded cheddar cheese. PAN USED: Ceramic plate.	75	1 minute	70	1 minute
Pizza, 12" (31 cm) Thin Crust Frozen, to thaw or rethermalize. PAN USED: 12" (31 cm) pizza screen.	20	4 minutes	20	3 minutes
Pizza, 12" (31 cm) Thin Crust Frozen thawed, to cook after Rethermalizing. PAN USED: 12" (31 cm) pizza screen.	50	3 minutes	45	2 minutes 30 seconds
Pizza, 12" (31 cm) Self-Rising Crust Frozen, slacked. PAN USED: 12" (31 cm) round, 2" (5 cm) deep, hardcoated pan, greased lightly.	50	5 minutes	40	5 minutes 20 seconds

NOTE: All food items listed are utilizing the bottom set of pins for supporting the wire plate rack.

RECOMMENDED FOOD FINISHING GUIDE

Food Item	Upper Power Value (UP)	Upper Time Value (UT)	Lower Power Value (LP)	Lower Time Value (LT)
Pork Sausage Links Skinless, raw. PAN USED: Half sheet pan, greased lightly.	70	4 minutes 30 seconds	65	5 minutes
Potato Skins Frozen, pre-prepared. PAN USED: Hardcoated half sheet pan.	40	4 minutes 15 seconds	35	4 minutes 10 seconds
Quesadillas 10 " (25 cm) flour tortillas, stuffed with sauteed peppers, onions & cheddar cheese. PAN USED: 10" (25 cm) aluminum pizza screen.	30	1 minute 45 seconds	40	1 minute
Tomato Halves, Broiled Lightly seasoned. PAN USED: Half sheet pan.	75	3 minutes 30 seconds	60	3 minutes

NOTE: All food items listed are utilizing the bottom set of pins for supporting the wire plate rack.

NOTE: When testing a menu item not listed above start by dividing the conventional cooking time by three and use that number as your cooking time. Set top and bottom heat at 50% and adjust from there. This Food Guide is based on a Thermo-Finisher model TF-4619. Program setting will vary based on model and food product.

HATCO LIMITED WARRANTY

1. PRODUCT WARRANTY

Hatco warrants the products that it manufactures (the "Products") to be free from defects in materials and workmanship, under normal use and service, for a period of one (1) year from the date of purchase when installed and maintained in accordance with Hatco's written instructions or 18 months from the date of shipment from Hatco. Buyer must establish the product's purchase date by returning Hatco's Warranty Registration Card or by other means satisfactory to Hatco in its sole discretion.

Hatco warrants the following Product components to be free from defects in materials and workmanship from the date of purchase (subject to the foregoing conditions) for the period(s) of time and on the conditions listed below:

- a) **One (1) Year Parts and Labor PLUS One (1) Additional Year Parts-Only Warranty:**
Toaster Elements (metal sheathed)
Drawer Warmer Elements (metal sheathed)
Drawer Warmer Drawer Rollers and Slides
Food Warmer Elements (metal sheathed)
Display Warmer Elements (metal sheathed air heating)
Holding Cabinet Elements (metal sheathed air heating)
- b) **One (1) Year Parts and Labor PLUS Four (4) Years Parts-Only Warranty on pro-rated terms that Hatco will explain at Buyer's request:**
3CS and FR Tanks
- c) **One (1) Year Parts and Labor PLUS Nine (9) Years Parts-Only Warranty on:**
Electric Booster Heater Tanks
Gas Booster Heater Tanks

THE FOREGOING WARRANTIES ARE EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR PATENT OR OTHER INTELLECTUAL PROPERTY RIGHT INFRINGEMENT. Without limiting the generality of the foregoing, SUCH WARRANTIES DO NOT COVER: Coated incandescent light bulbs, fluorescent lights, lamp warmer heat bulbs, glass components, Product failure in booster tank, fin tube heat exchanger, or other water heating equipment, caused by liming, sediment buildup, chemical attack or freezing, Product misuse, tampering or misapplication, improper installation or application of improper voltage.

2. LIMITATION OF REMEDIES AND DAMAGES

Hatco's liability and Buyer's exclusive remedy hereunder will be limited solely, at Hatco's option, to repair or replacement by a Hatco-authorized service agency (other than where Buyer is located outside of the United States, Canada, United Kingdom or Australia in which case Hatco's liability and Buyer's exclusive remedy hereunder will be limited solely to replacement of part under warranty) with respect to any claim made within the applicable warranty period referred to above. Hatco reserves the right to accept or reject any such claim in whole or in part. Hatco will not accept the return of any Product without prior written approval from Hatco, and all such approved returns shall be made at Buyer's sole expense. HATCO WILL NOT BE LIABLE, UNDER ANY CIRCUMSTANCES, FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, INCLUDING BUT NOT LIMITED TO LABOR COSTS OR LOST PROFITS RESULTING FROM THE USE OF OR INABILITY TO USE THE PRODUCTS OR FROM THE PRODUCTS BEING INCORPORATED IN OR BECOMING A COMPONENT OF ANY OTHER PRODUCT OR GOODS.

HATCO AUTHORIZED PARTS DISTRIBUTORS

ALABAMA

Jones McLeod Appl. Svc.
Birmingham 205-251-0159

ARIZONA

Auth. Comm. Food Equip.
Phoenix 602-234-2443
Byassee Equipment Co.
Phoenix 602-252-0402

CALIFORNIA

Industrial Electric
Huntington Beach 714-379-7100
Chapman Appl. Service
San Diego 619-298-7106
P & D Appliance
S. San Francisco 650-635-1900

COLORADO

Hawkins Commercial Appliance
Englewood 303-781-5548

DELAWARE

Food Equipment Service
Wilmington 302-996-9363

FLORIDA

Whaley Foodservice Repair
Jacksonville 904-725-7800
Universal Restaurant Services
Miami 305-593-5488
Nass Service Co., Inc.
Orlando 407-425-2681
B.G.S.I.
Pompano Beach 954-971-0456
Comm. Appliance Service
Tampa 813-663-0313

GEORGIA

TWC Services
Lake City 404-361-8010
Heritage Service Group
Norcross 866-388-9837
Southeastern Rest. Svc.
Norcross 770-446-6177

HAWAII

Burney's Comm. Service, Inc.
Honolulu 808-848-1466
Food Equip Parts & Service
Honolulu 808-847-4871

ILLINOIS

Parts Town
Lombard 708-865-7278
Eichenauer Elec. Service
Decatur 217-429-4229
Midwest Elec. Appl. Service
Elmhurst 630-279-8000
Cone's Repair Service
Moline 309-797-5323

INDIANA

GCS Service
Indianapolis 317-545-9655

IOWA

Electric Motor Service Co.
Davenport 319-323-1823
Goodwin Tucker Group
Des Moines 515-262-8308

KENTUCKY

GCS Service
Louisville 502-367-1788

LOUISIANA

Chandlers Parts & Service
Baton Rouge 225-272-6620
Bana Comm. Parts, Inc.
Harahan 504-734-0076

MARYLAND

Electric Motor Service
Baltimore 410-467-8080
GCS Service
Silver Spring 301-585-7550

MASSACHUSETTS

Ace Service Co., Inc.
Needham 781-449-4220

MICHIGAN

Commercial Kitchen Service
Bay City 517-893-4561
Bildons Appliance Service
Detroit 248-478-3320
Midwest Food Equip. Service
Grandville 616-261-2000

MINNESOTA

GCS Service
Minneapolis 612-546-4221

MISSOURI

General Parts
Kansas City 816-421-5400
Commercial Kitchen Services
St. Louis 314-890-0700
Kaemmerlen Parts & Service
St. Louis 314-535-2222

NEBRASKA

Anderson Electric
Omaha 402-341-1414

NEVADA

Burney's Commercial
Las Vegas 702-736-0006
Hi. Tech Commercial Service
N. Las Vegas 702-649-4616

NEW JERSEY

Jay Hill Repair
Fairfield 973-575-9145
Service Plus
Flanders 973-691-6300

NEW YORK

Acme American Repairs, Inc.
Brooklyn 718-456-6544
Alpro Service Co.
Brooklyn 718-386-2515
Appliance Installation
Buffalo 716-884-7425
Northern Parts Dist.
Plattsburgh 518-563-3200
J.B. Brady, Inc.
Syracuse 315-422-9271

NORTH CAROLINA

Authorized Appliance
Charlotte 704-377-4501

OHIO

Akron/Canton Comm. Svc. Inc.
Akron 330-753-6635
Certified Service Center
Cincinnati 513-772-6600
Commercial Parts and Service
Columbus 614-221-0057
Electrical Appl. Repair Service
Independence 216-459-8700
E. A. Wichman Co.
Toledo 419-385-9121

OKLAHOMA

Hagar Rest. Service, Inc.
Oklahoma City 405-235-2184
Krueger, Inc.
Oklahoma City 405-528-8883

OREGON

Bressie Electric Co.
Portland 503-231-7171
Ron's Service, Inc.
Portland 503-624-0890

PENNSYLVANIA

Elmer Schultz Services
Philadelphia 215-627-5401
FAST Comm. Appl. Service
Philadelphia 215-288-4800
GCS Service
Pittsburgh 412-787-1970
K & D Service Co.
Harrisburg 717-236-9039
Electric Repair Co.
Reading 610-376-5444

RHODE ISLAND

Marshall Electric Co.
Providence 401-331-1163

SOUTH CAROLINA

Whaley Foodservice Repair
W. Columbia 803-791-4420

TENNESSEE

Camp Electric
Memphis 901-527-7543

TEXAS

Stove Parts Supply
Fort Worth 817-831-0381
Armstrong Repair Service
Houston 713-666-7100
Commercial Kitchen Repair Co.
San Antonio 210-735-2811
San Antonio Rest. Equip.
San Antonio 210-532-1660

UTAH

La Monica's Rest. Equip. Service
Murray 801-263-3221

VIRGINIA

Daubers
Norfolk 757-855-4097
Daubers
Springfield 703-866-3600

WASHINGTON

Restaurant Appl. Service
Seattle 206-524-8200

WISCONSIN

A.S.C., Inc.
Madison 608-246-3160
A.S.C., Inc.
Milwaukee 414-543-6460

CANADA

BRITISH COLUMBIA

Key Food Equipment Service
Vancouver 604-433-4484

MANITOBA

Denko Mechanical Ltd.
Winnipeg 204-233-8003

ONTARIO

R.G. Henderson Ltd.
Toronto 416-422-5580

Choquette CKS
Ottawa 613-739-8458

QUÉBEC

Choquette CKS
Montreal 514-722-2000

Choquette CKS
Québec City 418-681-3944

HATCO CORPORATION

P.O. Box 340500, Milwaukee, WI 53234-0500 U.S.A.

(800) 558-0607 (414) 671-6350

Parts & Service Fax (800) 690-2966 Int'l. Fax (414) 671-3976

www.hatcocorp.com