




TT-2500/ BI-2500 SPARE PARTS LIST

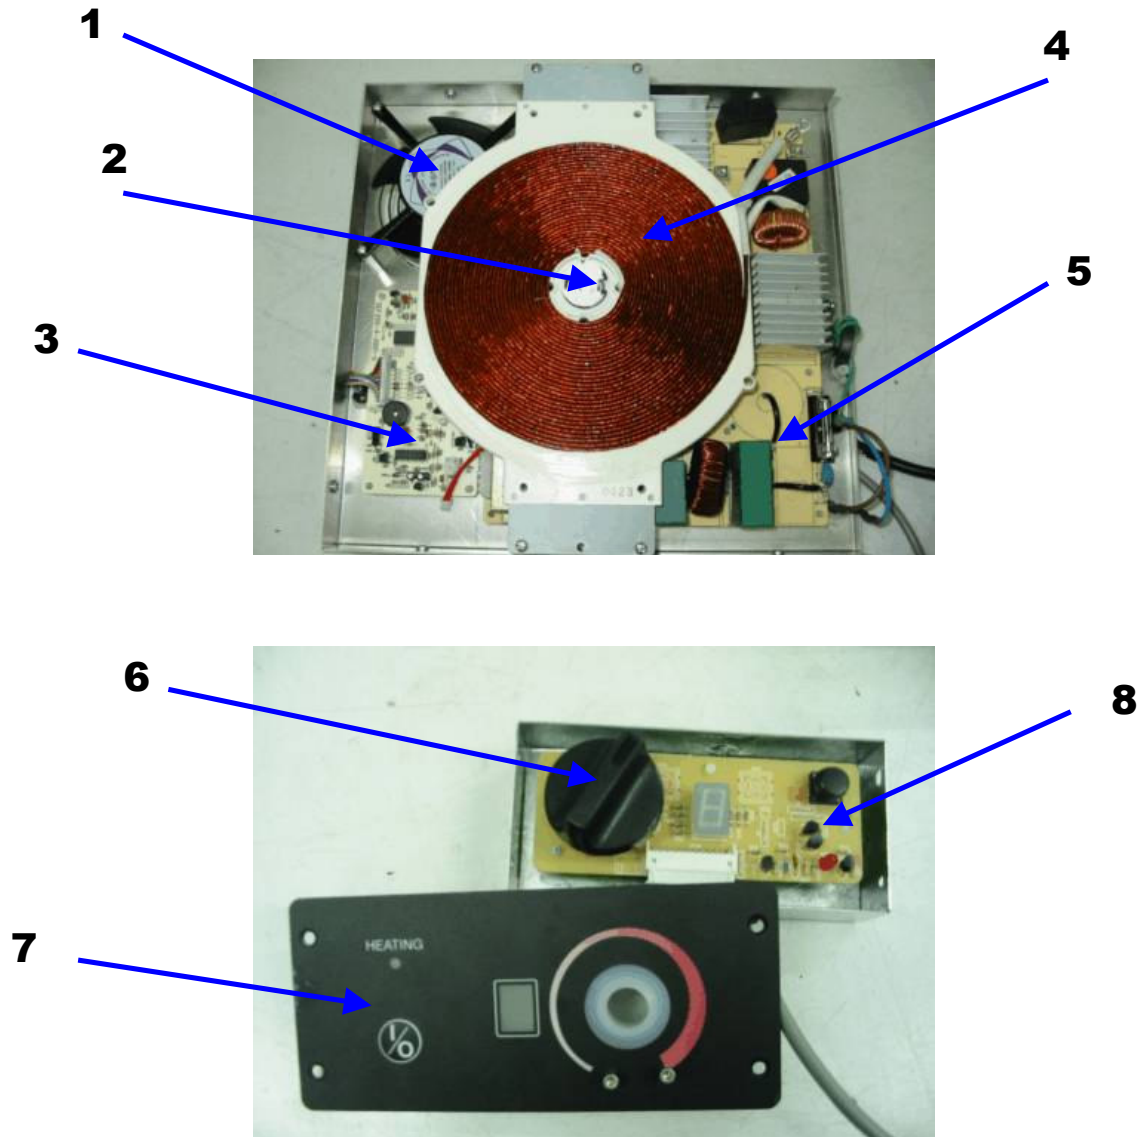

- | | |
|--|-----------------------------------|
| 1) SE-FAN-CB-25A - FAN | 6) SE-503-001-000 - KNOB |
| 2) SE-G01-5-0004-0 - SENSOR | 7) SE-FOIL-CB-25A - CONTROL PANEL |
| 3) SE-LOGIC-CB-25A - LOW VOLTAGE BOARD | 8) SE-CTRL-CB-25A - LED BOARD |
| 4) SE-COIL-CB-25A - COIL | 9) SE-702-006-010 - CERAMIC GLASS |
| 5) SE-PCB-CB-25A - MAIN BOARD | |