


# Installing the Quiet Shield™


**NOTICE:** Ensure the Quiet Shield™ is installed correctly. Breakage can occur if the dovetail joints along the bottom edges of the Quiet Shield™ are not properly interlocked with the upper base housing. If the Quiet Shield™ is installed improperly, thereby resulting in breakage of upper base housing, please call HB Commercial Technical Services at **866-285-1087** or **910-693-4277** to purchase a repair kit.

1

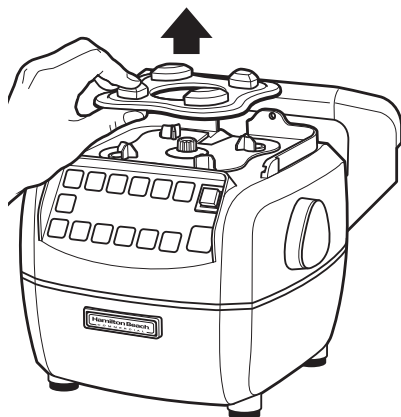


Remove jar pad by gently lifting up.

2

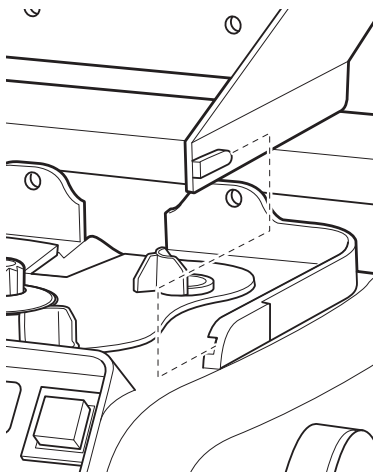


Align the dovetail joints along the base of the Quiet Shield™ with the cutout notches on the upper base housing.

3

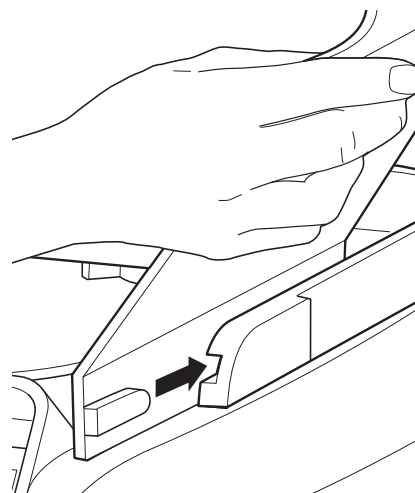


Slide Quiet Shield™ into place. If necessary, hold the edges of the shield open to ensure a secure fit.

4

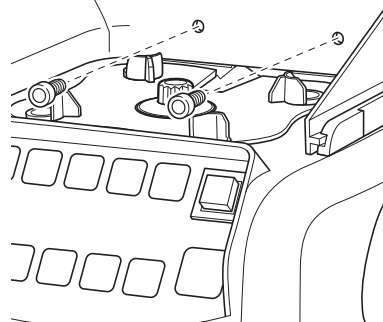

Install thumbscrews to secure Quiet Shield™ to upper base housing.

5

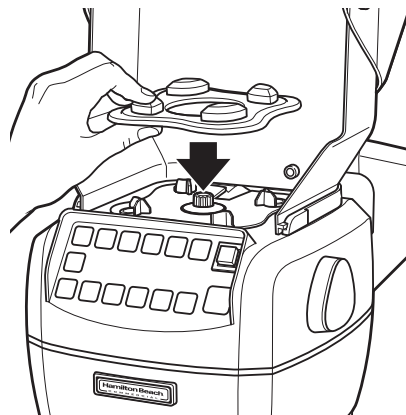

Replace jar pad.

**NOTE:** Periodically during operation and after every time the Quiet Shield™ is removed for cleaning, check to ensure the Quiet Shield™ is securely fastened to the upper base housing and thumbscrews remain tightened.

**Hamilton Beach**  
COMMERCIAL