



ICE VOLUME & BLEND TIME CUSTOMIZATION SHEET

Drink mixes and recipes can vary significantly affecting product yield and drink profiles. Therefore, Hamilton Beach has provided the ability to select from pre-programmed blend profiles and ice programs to meet your specific needs.



ICE VOLUME CUSTOMIZATION

1. To change from the Default Ice Volume Program settings, use the arrow keys  or  to scroll through the menu options until you reach the following menu item:

PRESS START
TO CHANGE
ICE PROGRAM

2. Press **START** to change ice volume program.
3. Select **Drink Size** and **QTY** to change (e.g. A-1). Once the cycle has been selected, press the **START** key to confirm the selection.

12oz 14oz 16oz 20oz
SELECT CYCLE
TO CHANGE
1DR 2DR 3DR 4DR


4. Use the  or  keys to scroll through the ice programs. There are 128 ice programs from which to select (1000 through 1127). The amount of ice portioned increases incrementally as the program number is increased. (Example: Program 1000 is the minimum amount of ice and Program 1127 is the maximum amount of ice.)

12oz 14oz 16oz 20oz
SELECT ICE PROGRAM
XXXX
1DR 2DR 3DR 4DR

5. Once the desired ice program has been reached, press the **START** key to confirm the selection. Once you have confirmed the selection, the machine will prompt you to select an additional cycle to change. You may select an additional cycle to change or press the stop key to quit. The **STOP** key can be depressed at any time to quit.

Display Overview

Key programming information is shown in the display

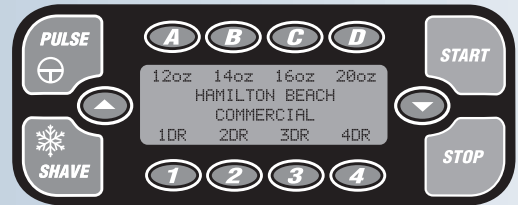

Default Ice Volume Programs:



QTY	DRINK SIZE			
	A 12 oz	B 14 oz	C 16 oz	D 20 oz
1 1DR	I015	I018	I021	I030
2 2DR	I030	I036	I042	I048
3 3DR	I045	I052	I052	I067
4 4DR	I056	I067	I069	N/A

If you need assistance with Customization contact our **TECHNICAL SERVICE DEPARTMENT** at 1-866-285-1087 or 910-693-4277. (For faster service please have model, series, and type numbers ready for operator to assist you.)

Hamilton Beach
COMMERCIAL

TM, ® Hamilton Beach/Proctor-Silex, Inc.
PRINTED IN THE USA • 05/05 • 0000-0505-COM



BLEND TIME CUSTOMIZATION

1. To change from the default Blend Time Programs, use the arrow keys  or  to scroll through the menu options until you reach the following menu item:

PRESS START
TO CHANGE
BLEND PROFILE

2. Press **START** to change blend time profile.
3. Select **Drink Size** and **QTY** to change (e.g. A-1). Once the cycle has been selected, press the **START** key to confirm the selection.

12oz 14oz 16oz 20oz
SELECT CYCLE
TO CHANGE
1DR 2DR 3DR 4DR


4. Use the  or  keys to scroll through the blend time programs. There are 32 blend profiles from which to select (R010 through R072). The total blend time increases incrementally as the profile number is increased. (Example: Program R010 is the minimum blend time and Program R072 is the maximum blend time.)

12oz 14oz 16oz 20oz
SELECT BLEND PROFILE
XXXX
1DR 2DR 3DR 4DR

5. Once the blend profile has been reached, press the **START** key to confirm the selection. Once you have confirmed the selection, the machine will prompt you to select an additional cycle to change. You may select an additional cycle to change or press the stop key to quit. The **STOP** key can be depressed at any time to quit.

Display Overview

Key programming information is shown in the display

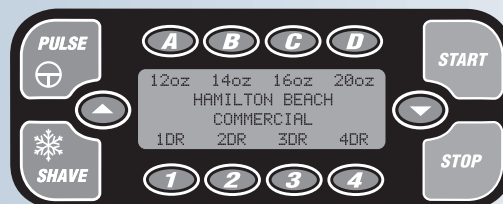

Default Blend Time Programs:

QTY	DRINK SIZE			
	A 12 oz	B 14 oz	C 16 oz	D 20 oz
1 1DR	R022	R026	R030	R038
2 2DR	R028	R034	R038	R048
3 3DR	R036	R042	R046	R058
4 4DR	R042	R050	R056	N/A

If you need assistance with Customization contact our **TECHNICAL SERVICE DEPARTMENT** at 1-866-285-1087 or 910-693-4277. (For faster service please have model, series, and type numbers ready for operator to assist you.)

